 


## Manuel Şaryo



Çalışma Yüğü / t	Ölçüler / mm- A	Ölçüler / mm- B	Ölçüler / mm- C	Ölçüler / mm- E
0,5	190	154	22	27
1	206	180	30	26
2	246	210	37	26
3,2	300	249	42	28
5	336	277	50	37
10	396	334	58	37